

Draytek IC-air configuration

191 Keira Tait Mon, Dec 18, 2017 [Draytek Routers](#) 1572

Before you start to configure the router. Please see the Article "How to locate your configuration sheet". Once you have read and followed the steps in that article, you can proceed to configure your router.

1. Log into the device via IP 192.168.1.1 using these details ;username = admin Password = admin
2. Once logged in, select Internet access in WAN, change the access mode to PPPOE and then select details page

ADSL2+ Security Firewall

Off IPv6

Wizards
Online Status

WAN
General Setup
Internet Access
Internet PVCs

LAN
Load Balance/Route Policy
NAT

Firewall
User Management
Objects Setting
CSM

Bandwidth Management
Applications
VPN and Remote Access
Certificate Management
VoIP

Wireless LAN
SSL VPN
USB Application
System Maintenance
Diagnostics
External Devices

Support Area
Product Registration

Logout
All Rights Reserved.

WAN >> Internet Access


Internet Access

Index	Display Name	Physical Mode	Access Mode	Details Page	IPv6
WAN1		ADSL	PPPoE / PPPoA	Details Page	IPv6
WAN2		Ethernet	PPPoE	Details Page	IPv6
WAN3		USB	3G/4G USB Modem(PPP mode)	Details Page	IPv6


Note : Only one WAN port can be configured to support IPv6.

Advanced You can configure DHCP client options here.

3. Once you're in details page, enable the connection, put in your own customer username and password (if you do not have these and cannot find them from the how to locate your configuration sheet, contact support).

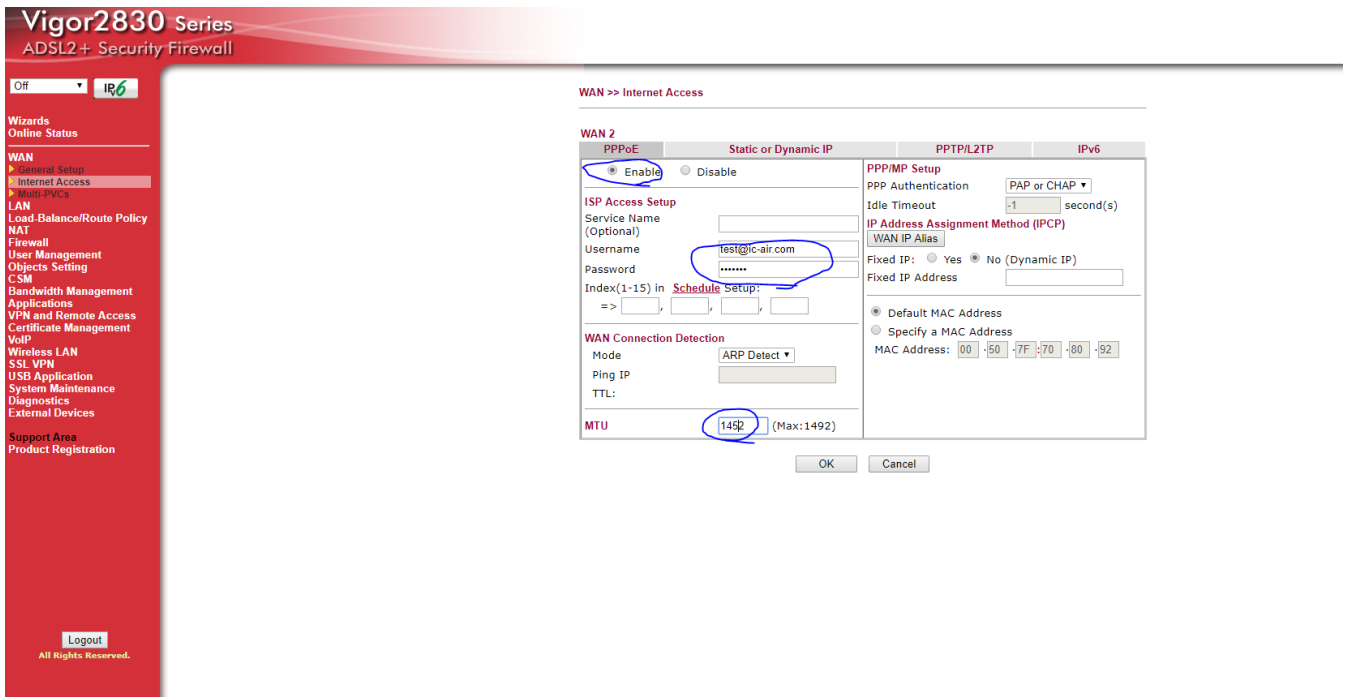

Once this is completed, you should gain internet access, if you wish to configure your WIFI go to the below.

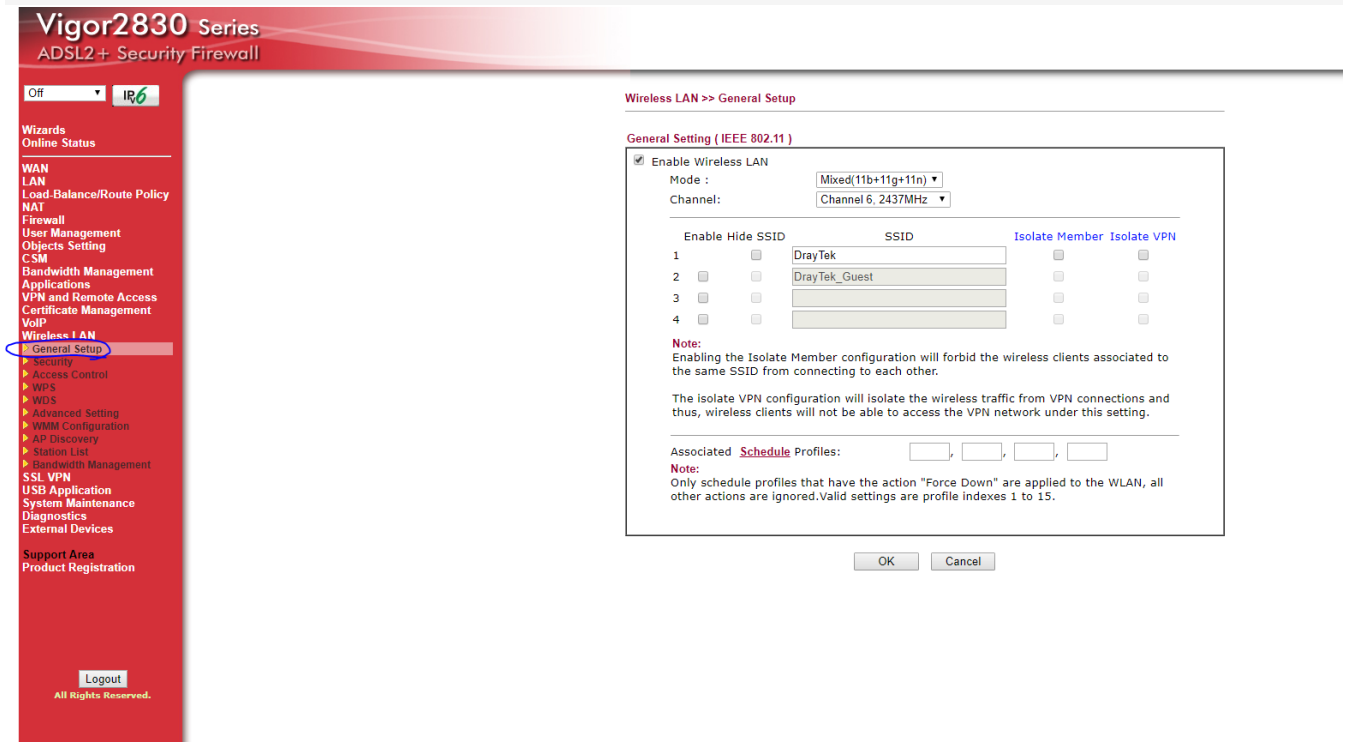

Within General setup you can change the SSID, and within security you can change the password for the WIFI.

You have now completed the steps to configuring your router.

Online URL: <https://kb2.ic.uk/article.php?id=191>