# Call Forward Not Reachable / Automatic failover

266 Darren M Thu, Feb 11, 2021 Feature guides, User Features 1339

# Call Forward Not Reachable / Automatic failurer in case of failure

## **Description**

This feature enables a User to redirect incoming calls to another phone destination when the Uses device fails to respond to an incoming call request or is not registered with the service.

For example if your phone were to break, Internet connection fails, Power goes off etc.. then the next call that came in would be automatically diverted to your chosen alternative number such as your mobile.

This function should be used for disaster recovery and to ensure you never miss a call.

#### **Function**

Call Forward Not Reachable forwards calls to a specified forwarding phone number when the Users device fails to respond to an incoming call request.

### **Configuration/Operation**

Call Forwarding Not Reachable can be activated and deactivated by use of Feature Access Codes:

\*94 Call Forwarding Not Reachable Activation (Follow instructions to enter destination number)

\*95 Call Forwarding Not Reachable Deactivation

\*63\* Call Forwarding Not Reachable Status


## **Web Portal Configuration/Operation**

This service can also be set through the web portal.

To configure Call Forward Not Reachable through the Business Portal, navigate to:

- Employees (select employee) > Features > Call Forwarding
- Select the 'Forward calls when there is no answer' box to turn on the Call?

# Forwarding Not Reachable feature

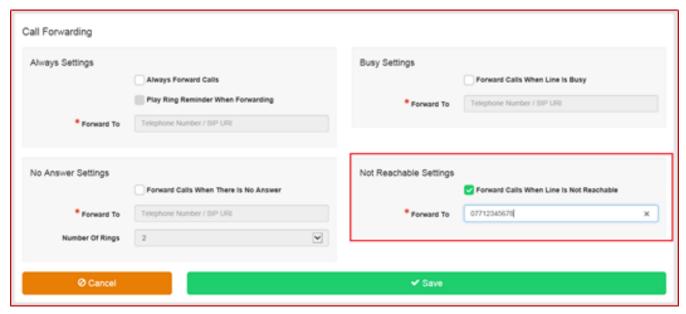

- Enter a valid phone number or SIP URI that you wish to forward all calls to when the line is not answered in the 'Forward to number/SIP URI' box. If the number or SIP URI you enter is not valid the caller will receive number unattainable tone or a network announcement.
- Click Save

Online URL: <a href="https://kb2.ic.uk/article.php?id=266">https://kb2.ic.uk/article.php?id=266</a>