

Conferences

102 Mark Simcoe Tue, Aug 1, 2017 [Applications Modules](#) 1692

Overview


The Conferences Module is used to create a single extension number that your users can dial so that they can talk to each other in a conference call. It also creates a destination to which you can send calls so that they can participate in the conference call. For example, you could create a Conference that will allow your local phones to dial 800, and then enter into a conference call.

Logging In

- From the top menu click **Applications**
- In the drop down click **Conferences**

Creating a Conference Room

- Click the **Add** button.

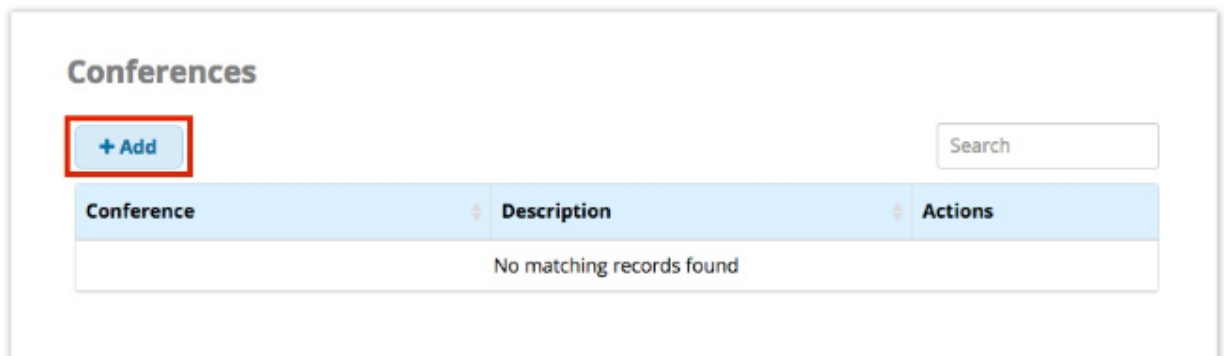

- Fill in the information on the form, as described below.

The image shows a configuration form for a conference. It contains the following fields and options:

- Conference Number**: A text input field.
- Conference Name**: A text input field with a character count of 0/50.
- User PIN**: A text input field.
- Admin PIN**: A text input field.
- Join Message**: A dropdown menu currently set to "None".
- Leader Wait**: A toggle with "Yes" and "No" buttons, currently set to "No".
- Talker Optimization**: A toggle with "Yes" and "No" buttons, currently set to "No".
- Talker Detection**: A toggle with "Yes" and "No" buttons, currently set to "No".
- Quiet Mode**: A toggle with "Yes" and "No" buttons, currently set to "No".
- User Count**: A toggle with "Yes" and "No" buttons, currently set to "No".
- User Join/leave**: A toggle with "Yes" and "No" buttons, currently set to "No".
- Music on Hold**: A toggle with "Yes" and "No" buttons, currently set to "No".
- Music on Hold Class**: A dropdown menu currently set to "inherit".
- Allow Menu**: A toggle with "Yes" and "No" buttons, currently set to "No".
- Record Conference**: A toggle with "Yes" and "No" buttons, currently set to "No".
- Maximum Participants**: A text input field containing the value "0".

Conference Number

Use this number to dial into the conference.

Conference Name

Give this conference a brief name to help you identify it.

User PIN

Optional - You can require callers to enter a password before they can enter this conference. If either PIN is entered, the user will be prompted to enter a PIN. The user PIN should be different from the admin PIN.

Admin PIN

Optional unless the "leader wait" option is in use - Enter a PIN number for the admin user. When a user enters this PIN, he/she will be identified as the conference leader.

Join Message

Message to be played to the caller before joining the conference. Default = none. The drop-down menu allows you to select a recording that has been created in the System Recordings module.

Leader Wait

Yes/No - Whether to wait until the conference leader (admin user) arrives before starting the conference.

Talker Optimization

Yes/No - Whether to use talker optimization. With talker optimization, Asterisk treats talkers who are not speaking as being muted. This means that no encoding is done on transmission, and that received audio that is not registered as talking is omitted, preventing buildup in background noise.

Talker Detection

Yes/No - Whether to use talker detection. With talker detection, Asterisk will send events on the Manager Interface identifying the channel that is talking. The talker will also be identified on the output of the meetme list CLI command.

Quiet Mode

Yes/No - Whether to use quiet mode. If quiet mode is enabled, enter/leave sounds will not be played.

User Count

Yes/No - Whether to announce the user count to a user who joins the conference.

User Join/Leave

Yes/No - Whether to announce user join/leave. If this option is enabled, all users will be asked to say their name before they join the conference, and their name will be then announced when they join the conference.

Music on Hold

Yes/No - Whether to enable Music On Hold when the conference has a single caller.

Music on Hold Class

Select the music (or Commercial) played to the caller while they wait for the conference to start. Choose "inherit" if you want the MoH class to be what is currently selected, such as by the inbound route. This music is defined in the Music on Hold module.

Allow Menu

Yes/No - Whether to present a menu (user or admin) when ' * ' is received ('send' to menu)

Record Conference

Yes/No - Whether to record the conference call.

Maximum Participants

Enter the maximum number of users allowed to join this conference. Enter "0" for unlimited.

Mute on Join

Yes/No - Whether to mute everyone when they initially join the conference. Please note that if you do not have "Leader Wait" set to "Yes," you will need to have "Allow Menu" set to "Yes" to be able to un-mute yourself.

PRO Option: Add to Conference IVR

If you have Conferences Pro on your system, you'll have the option to add this conference room to the Conference IVR. Please see the Conference Pro-Admin Guide for information on additional features provided by the Conference Pro module.

OTHER Options

Other options may be available based on installed modules such as VQ Plus and iSymphony. For example, you may have the option to add your conference room to XactView.

XactView

Add to XactView 

Save

- Click the **Submit** button.
- Click the **Apply Config** button.

Viewing, Editing, and Deleting Conferences

- If not already at the Conference Module main page, click the **List Conferences** button to view the list.





 **List Conferences**

- Available conference rooms are displayed in a table.

☰ List Conferences
+ Add

Conference	Description
82000	Conference room 1
82001	Conference room 2
82002	Conference room 3
87710	7710's conference room

- To **view or edit** a conference, click the pencil icon 
- To **delete** a conference, click the trash icon 

Conference Menu User Guide

Meetme Menus if enabled (press * to access the menu)

DIGIT	ADMIN USER	NON-ADMIN USER
1	Mute/Un-Mute Self	Mute/Un-Mute Self
2	Lock/Unlock Conference	Disabled
3	Eject last user who joined conference	Disabled
4	Decrease Listen Volume of Conference	Same for user
5	Resets the caller's listening volume to the default level.	Same for user
6	Increase Listen Volume of Conference	Same for user
7	Decrease Talk volume	Same for user
8	Leave Menu	Same for user
9	Increase Talk volume	Same for user
0	Allows an Admin to mute/unmute all non-admin participants in the conference	Disabled
*	Play menu options	Same for user
#	Leave Conference	Leave Conference

Online URL: <https://kb2.ic.uk/article.php?id=102>