ADSL Zyxel Router Configuration

139 Wayne Coulthard Tue, Sep 5, 2017 Zyxel Routers 3041


ADSL Zyxel Router Configuration

Before you start to configure the router. Please see the Article "How to locate your configuration sheet". Once you have read and followed the steps in that article, you can proceed to configure your router.

1. Log into the device via IP 192.168.1.1 using these details ;Username = admin Password = 1234

ZyXEL		
Welcome to VMG3	25-B10B configuration interface.	
Username:		
Password:		
		Login
		Login

- 2. Change the admin password to the password written on your configuration sheet.
- 3. Hover over network settings, and go to Broadband.

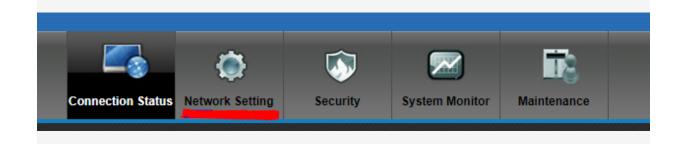

4. On ADSL, click the modify button on the far right.

Add New WAN	I Interface											
#	Name	Туре	Mode	Encapsulat	802.1p	802.1q	IgmpProxy	NAT	Default Gat	IPv6	MLD Proxy	Modify
1	ADSL	ATM	Routing	IPoE	N/A	N/A	Y	Y	Y	N	N	
2	VDSL	PTM	Routing	PPPoE	0	101	Y	Y	Y	N	N	21
3	ETHWAN	ETH	Routing	IPoE	N/A	N/A	Y	Y	Y	N	N	21

- 5. Change encapsulation to PPOA, Change the VPI to show 0 and the VCI to show 38.
- 6. Enter the PPP username and password, this will be on the configuration sheet.

N Interface Edit		
General		
Name	ADSL	
Туре	ADSL over ATM	
Mode	Routing Bridge	
Encapsulation	PPPoA V	
IPv4/IPv6 Mode	IPv4 Only	
PPP Information		
PPP User Name		
PPP Password		
	password unmask	
PPP Connection Trigger	Auto Connect On Demand	
PPPoE Passthrough	Enable Disable	
IP Address		
Obtain an IP Address Automatically		
Static IP Address		
ATM PVC Configuration		
VPI [0-255] :	0	
VCI [32-65535] :	38	
Encapsulation	LLC/SNAP-BRIDGING V	

Now you have completed the network setup, all that is left is end user settings and remote management.

1. Hover over Maintenance, and go to Remote Management.



2. Click all of the trust domains for every port and APPLY.

service	LAN/WLAN	WAN	Trust Domain	Port
HTTP	Enable	Enable	Enable	80
HTTPS	Enable	Enable	Enable	443
FTP	Enable	Enable	Enable	21
TELNET	Enable	Enable	Enable	23
SSH	Enable	Enable	Enable	22
SNMP	Enable	Enable	Enable	161
PING	Enable	Enable	Enable	
				Apply Cancel

You have now completed the steps to configuring your router.

Online URL: <u>https://kb2.ic.uk/article.php?id=139</u>